

NGS - variant analysis

Variant calling

GATK workflow

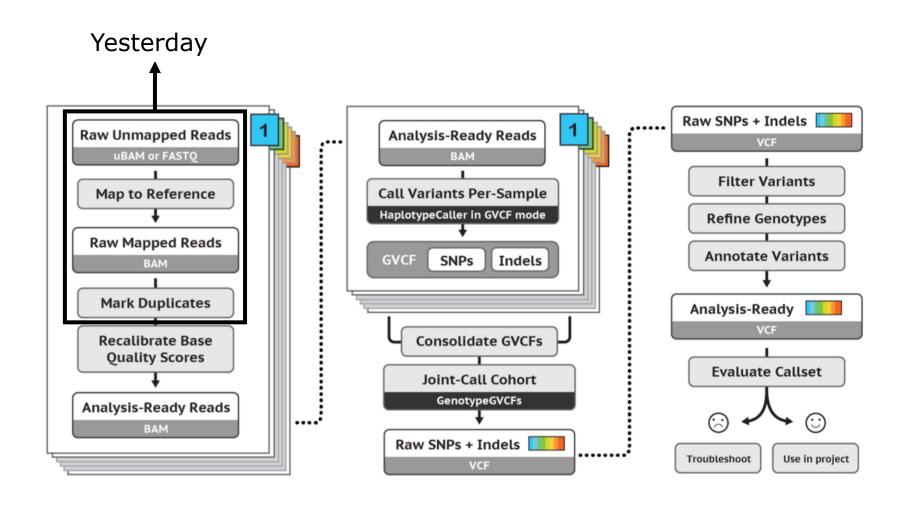

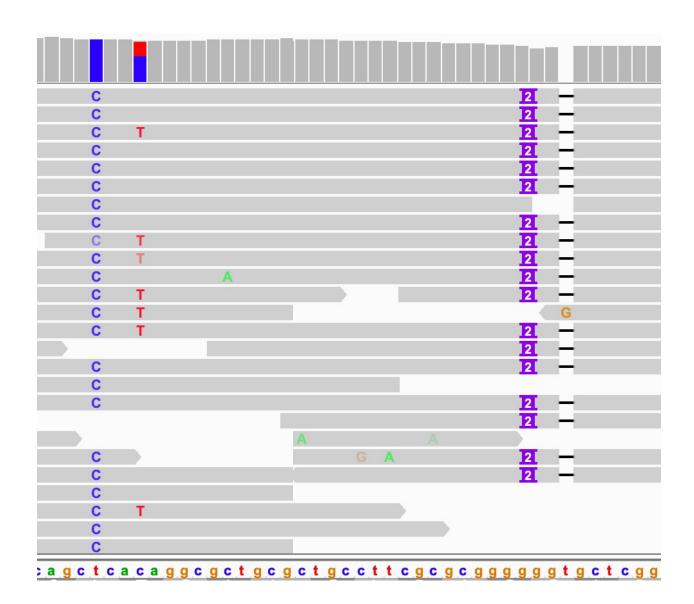



Estimating genotype


What are the likely genotypes?

At site X in sample Y we count 9 bases:

5 REF and 4 ALT Pr(X=4) = 0.25 if heterozygous so: $\mathcal{L}(p=0.5 \mid X=4) = 0.25$



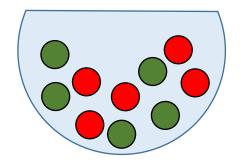

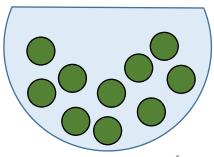


Quiz Question 6

Estimating genotype

What are the likely genotypes?: At site X in sample Y we count 9 bases:


8 REF and 1 ALT
$$\mathcal{L}(p=0.5 \mid X=1) = 0.017$$
 $\mathcal{L}(p=0 \mid X=1) = 0$

Strict binomial distribution would only work with error-free data

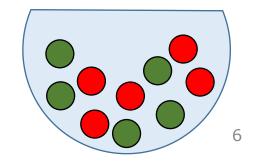

Base quality and error

- Base quality: 20 = error probability 0.01
- 100 samples with 40x coverage
- In total 40 errors expected

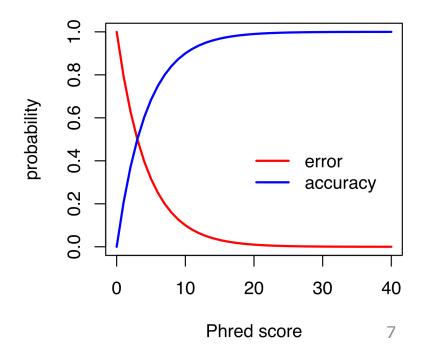

Estimating the genotype

Genotype likelihood (simplified):

$$\mathcal{L}(g) = \frac{1}{m^k} \prod_{j=1}^l \left[(m-g)\epsilon_j + g(1-\epsilon_j) \right] \prod_{j=l+1}^k \left[(m-g)(1-\epsilon_j) + g\epsilon_j \right]$$

g: genotype (i.e. 0, 1 or 2)


m: ploidy (2 for human)

€: base error

k: number of bases at the site

I: number of bases that equal reference

Estimating the genotype

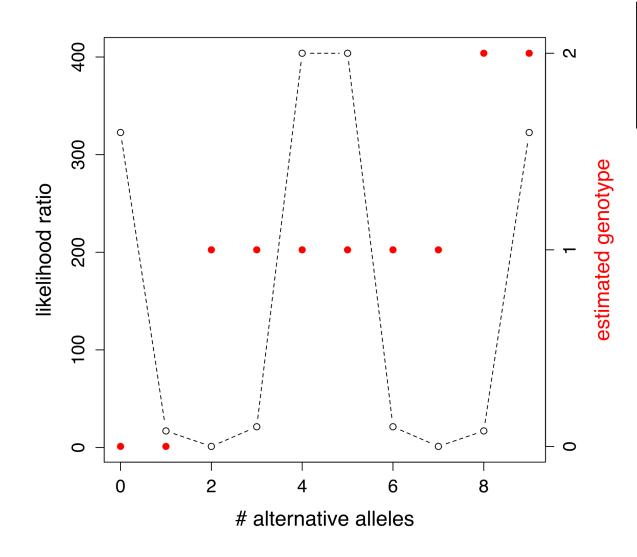


$$g = 0,1 \text{ or } 2$$

 $m = 2$
 $\epsilon = 0.05 \text{ (BQ=13)}$
 $k = 9$


Base quality correction

- Essential for estimating genotype likelihood
- Context can affect base quality, e.g.:
 - homopolymers
 - cycle
- estimated error rate # 'real' error rate
- Base quality score recalibration (BQSR) takes this context into account

BQSR

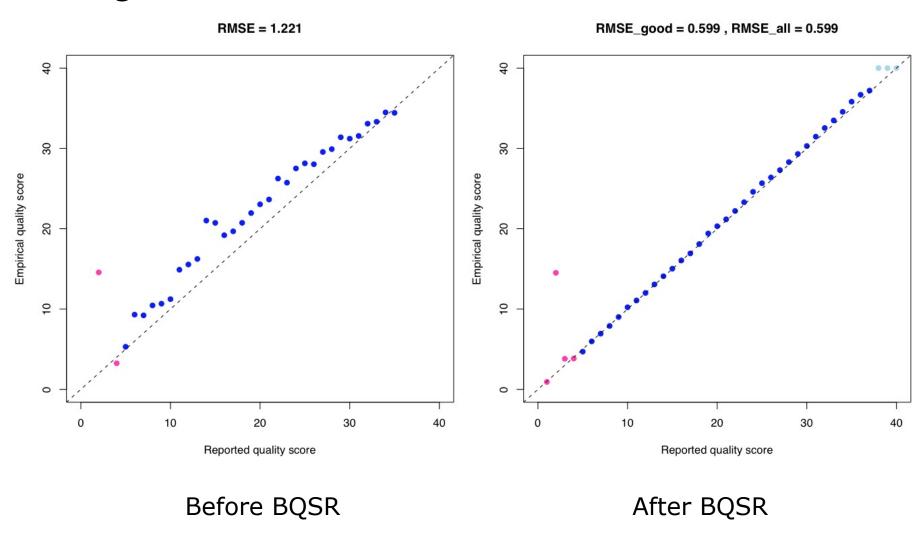


HaplotypeCaller

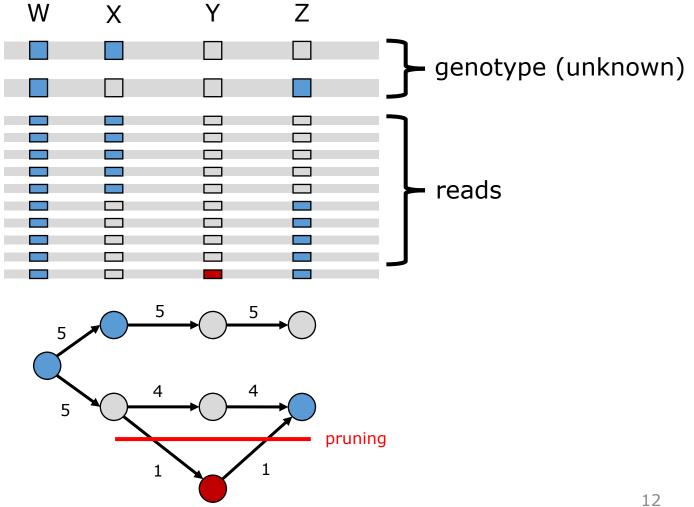


HaplotypeCaller

- Indel realignment
- Expensive process, but only on 'active' regions

bwa alignment

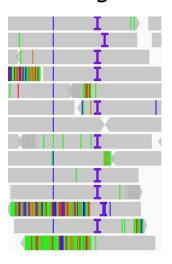

re-aligned

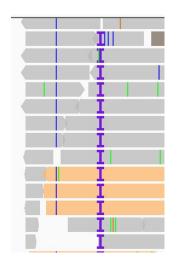

vcf

```
##fileformat=VCFv4.3
##fileDate=20090805
##source=myImputationProgramV3.1
##reference=file:///seg/references/1000GenomesPilot-NCBI36.fasta
\#\#contig=<ID=20,length=62435964,assembly=B36,md5=f126cdf8a6e0c7f379d618ff66beb2da,species="Homo sapiens".taxonomy=x>
##phasing=partial
##INFO=<ID=NS,Number=1,Type=Integer,Description="Number of Samples With Data">
##INFO=<ID=DP, Number=1, Type=Integer, Description="Total Depth">
##INFO=<ID=AF, Number=A, Type=Float, Description="Allele Frequency">
##INFO=<ID=AA, Number=1, Type=String, Description="Ancestral Allele">
##INFO=<ID=DB,Number=0,Type=Flag,Description="dbSNP membership, build 129">
##INFO=<ID=H2, Number=0, Type=Flag, Description="HapMap2 membership">
##FILTER=<ID=q10,Description="Quality below 10">
##FILTER=<ID=s50, Description="Less than 50% of samples have data">
##FORMAT=<ID=GT, Number=1, Type=String, Description="Genotype">
##FORMAT=<ID=GQ, Number=1, Type=Integer, Description="Genotype Quality">
##FORMAT=<ID=DP, Number=1, Type=Integer, Description="Read Depth">
##FORMAT=<ID=HQ,Number=2,Type=Integer,Description="Haplotype Quality">
                                                                                         FORMAT
#CHROM POS
                                        QUAL FILTER
                                                                                                      NA00001
                           REF
                                 ALT
                                                       INFO
                                                                                                                      NA00002
                                                                                                      010:48:1:51,51
                                              PASS
                                                                                         GT:GO:DP:HO
                                                                                                                      1 0:48:8:51,51
20
       14370
                rs6054257 G
                                        29
                                                       NS=3;DP=14;AF=0.5;DB;H2
20
       17330
                                        3
                                                      NS=3;DP=11;AF=0.017
                                                                                         GT:GQ:DP:HQ
                                                                                                     0 0:49:3:58,50
                                                                                                                      0|1:3:5:65,3
                                              q10
                                                      NS=2;DP=10;AF=0.333,0.667;AA=T;DB GT:GQ:DP:HQ
                                                                                                     1|2:21:6:23,27
                                                                                                                      2|1:2:0:18,2
20
       1110696 rs6040355 A
                                 G.T
                                        67
                                              PASS
                                                                                                     0 0:54:7:56,60
                                                                                                                      0|0:48:4:51,51
20
       1230237 .
                                        47
                                              PASS
                                                      NS=3;DP=13;AA=T
                                                                                         GT:GO:DP:HQ
       1234567 microsat1 GTC
                                              PASS
                                                      NS=3;DP=9;AA=G
                                                                                         GT:GO:DP
                                                                                                      0/1:35:4
20
                                 G,GTCT 50
                                                                                                                      0/2:17:2
                                                                                                      samples
```


Quiz Question 7


#CHROM	POS	ID	REF	ALT
20	14370	rs6054257	G	Α
20	17330	•	T	Α
20	1110696	rs6040355	Α	G,T
20	1230237	•	T	•
20	1234567	microsat1	GTC	G,GTCT
			†	† †
			0	1 2 n

NA00001	NA00002
0 0:48:1:51,51	1 0:48:8:51,51
0 0:49:3:58,50	0 1:3:5:65,3
1 2:21:6:23,27	2 1:2:0:18,2
0 0:54:7:56,60	0 0:48:4:51,51
0/1:35:4	0/2:17:2
	0 0:48:1:51,51 0 0:49:3:58,50 1 2:21:6:23,27 0 0:54:7:56,60

sample 1

sample 2

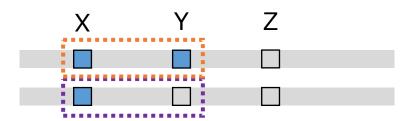

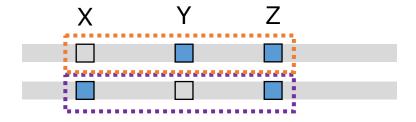

sample	1.vcf		
CHROM	POS	ID	SAMP1
20	1101	SNPX	1 1
20	1203	SNPY	0 1

sample	2.vcf		
CHROM	POS	ID	SAMP2
20	1101	SNPX	1 0
20	1203	SNPY	0 1
20	1253	SNPZ	1 1

combined.vcf				
CHROM	POS	ID	SAMP1	SAMP2
20	1101	SNPX	1 1	1 0
20	1203	SNPY	0 1	0 1
20	1253	SNPZ	5	1 1

Quiz Question 8

Missing genotype problem

- Most variant callers genotype all samples in one go. But:
 - variant calling process can become very computational intensive
 - new sample? Redo entire variant call
- GATK uses GVCF:
 - Store information on non-variant regions

Other software

- freebayes: haplotype-aware variant calling -> good alternative to gatk
- bcftools: working with vcfs (part of samtools)
- vcftools: working with vcfs
- whatshap: haplotyping
- medaka: SNP calling in Oxford nanopore data

GATK workflow

